
## EasyFrame In-Feed and Out-Feed

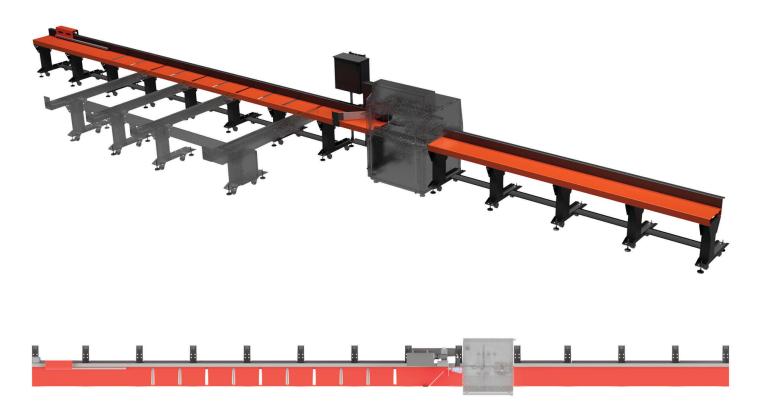

The EasyFrame In-Feed and Out-Feed sections can be adjusted to accommodate stock material from 6' to 66', allowing you to build a system perfect for your needs whether you're cutting EWP or dimensional lumber. The sections can be paired with either a manual or automated saw.



**Compatible with:** Walls, Floors, Roofs, Trusses, EWP, Big Timbers

## Capabilities

Modular Sections	2' and 6' modular sections to accommodate required in-feed and out-feed lengths
In-Feed	Minimum 8'; up to 66'
Out-Feed	Minimum 8'; up to 66'